

Instructions for removing closet rod and moving a fixed shelf.



STEP 1. Remove closet rod by lifting from under the rod on one side. Remove rod cups. Use flat head screw driver or putty knife to pry behind the cup if needed.



STEP 3. Use phillips screw driver no. 2 to unlock each fixed cam by inserting the screw driver and turning it 180 degrees or so the flat edge of each screw is facing the panel.



STEP 2. Locate the locking cams beneath the fixed shelf. There are four cams on each shelf. See above picture: when the flat edge of the phillips screw is facing away from the panel, the cam is locked.



STEP 4. Once all cams are unlocked, carefully tap one side then the next to release the shelf from the dowels in the panels. Lift the shelf out and set aside.

STEP 5. Remove the dowel studs by inserting your phillips screwdriver into the end of the dowel. Press towards the panel and give a few rotations in the counterclockwise direction to loosen the dowel. Next unthread the dowel by hand and reuse. Place dowels at any height along the panel and work in opposite order to the replace shelf and rod location.